












# ASSEMBLY INSTRUCTION

## GENTS WARDROBE


Page : 1 of 6

No	LIST OF HARDWARE	Q.ty (pcs)
①	Bolts M6x60 	8
②	Allen key K4 	1
③	Handles 	4
④	Flat screw Ø3.5 x 12 	8
⑤	Hinge 	6 Sets
⑥	Screw M 5x18 	8
⑦	Round head Screw Ø4 x 30 	16
⑧	Plastic bracket 	4
⑨	Tie 	2
⑩	Screw Ø4x20 	4


Screwdriver (not included)




Ⓐ x1: Base

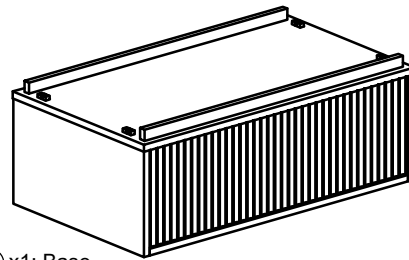


Ⓑ x1Set : Legs Frame

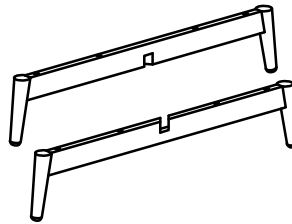


Ⓒ x 2 ( Left -Right ) :Side Frame

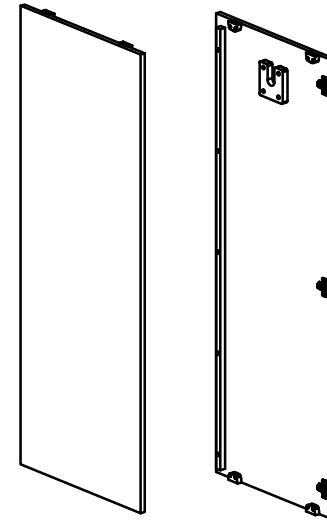


Ⓓ x 1 :Top Frame

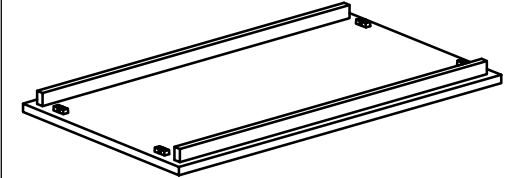



Ⓕ x 2 ( Left -Right ) : Door

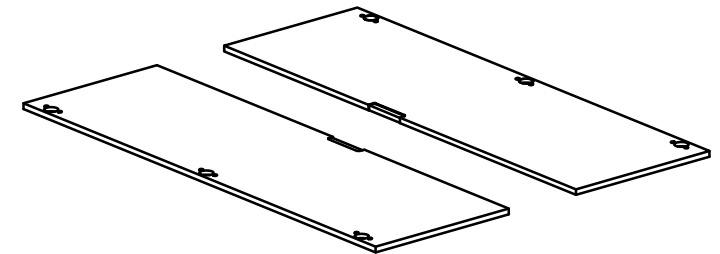

Ⓖ x 1 : Hanging




Ⓔ x 1 : Back Frame

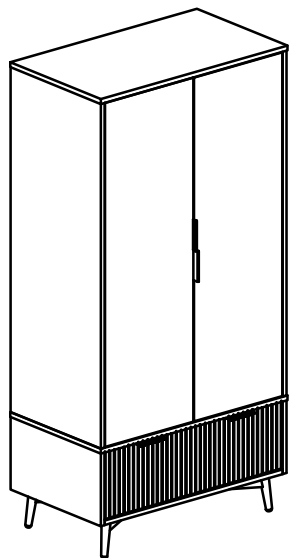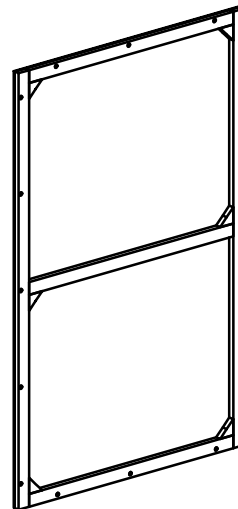


# ASSEMBLY INSTRUCTION GENTS WARDROBE

Page : 2 of 6



## STEP 1

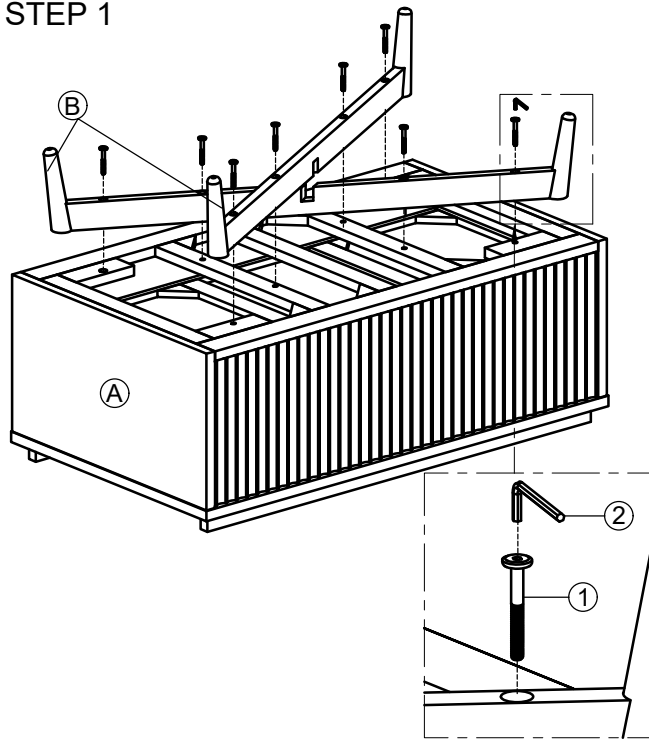


## STEP 2

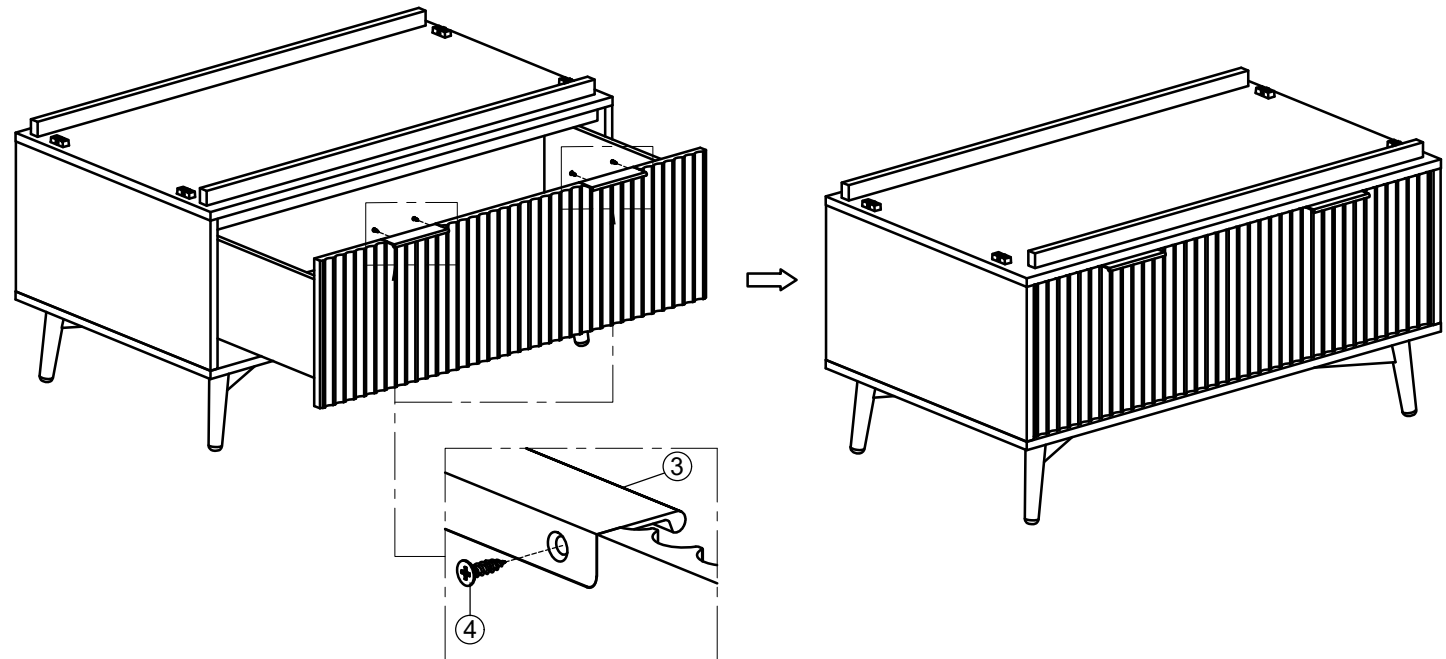

## STEP 3

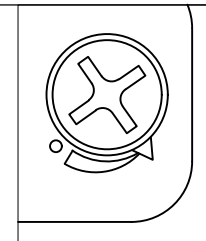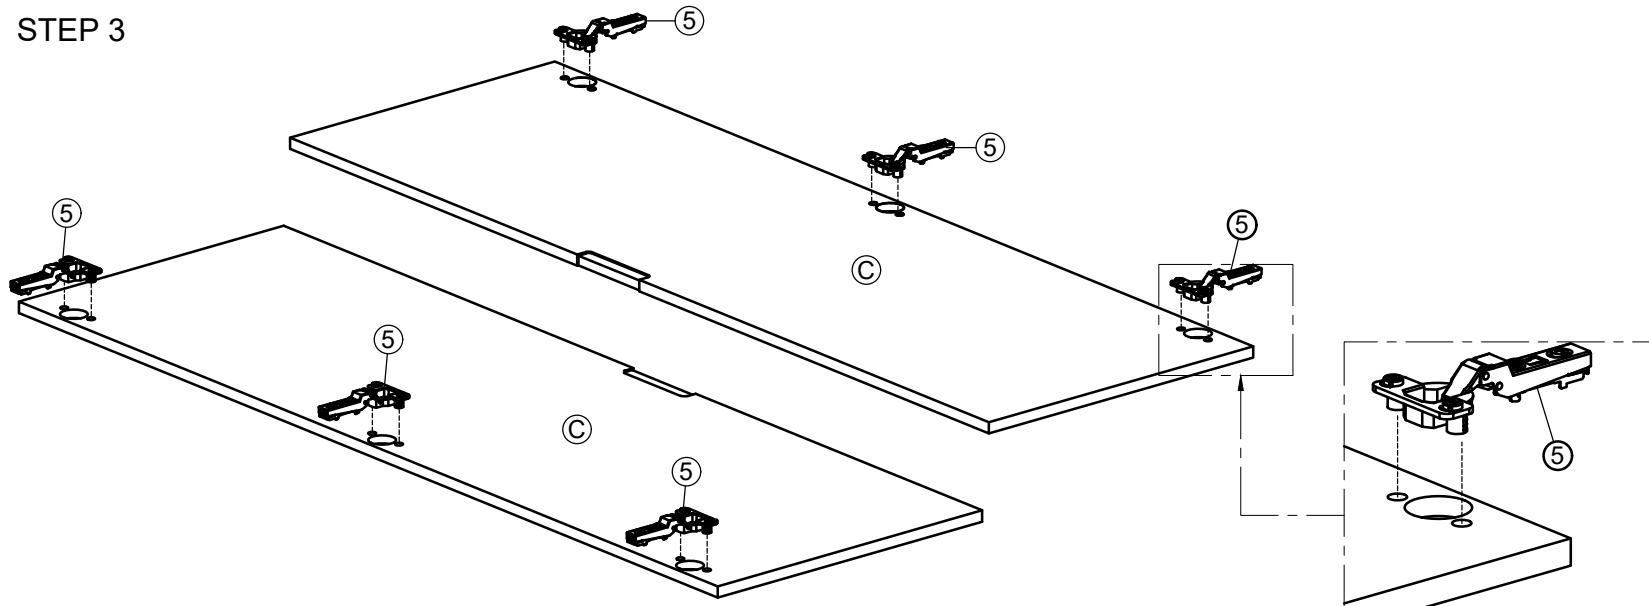

Unlock

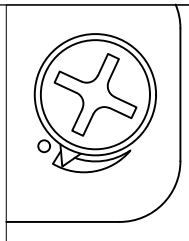


Lock

**NOTE:**  
Turn screws in a clockwise motion  
to secure the hinges in place


# ASSEMBLY INSTRUCTION GENTS WARDROBE

Page : 3 of 6

## STEP 4

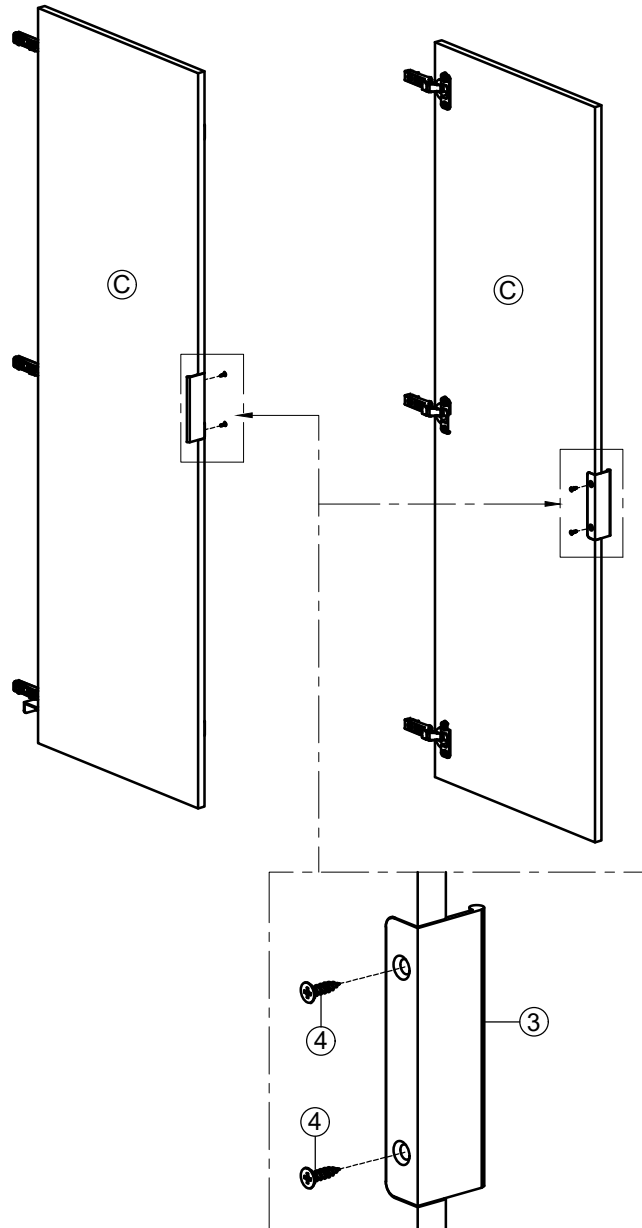


## STEP 5

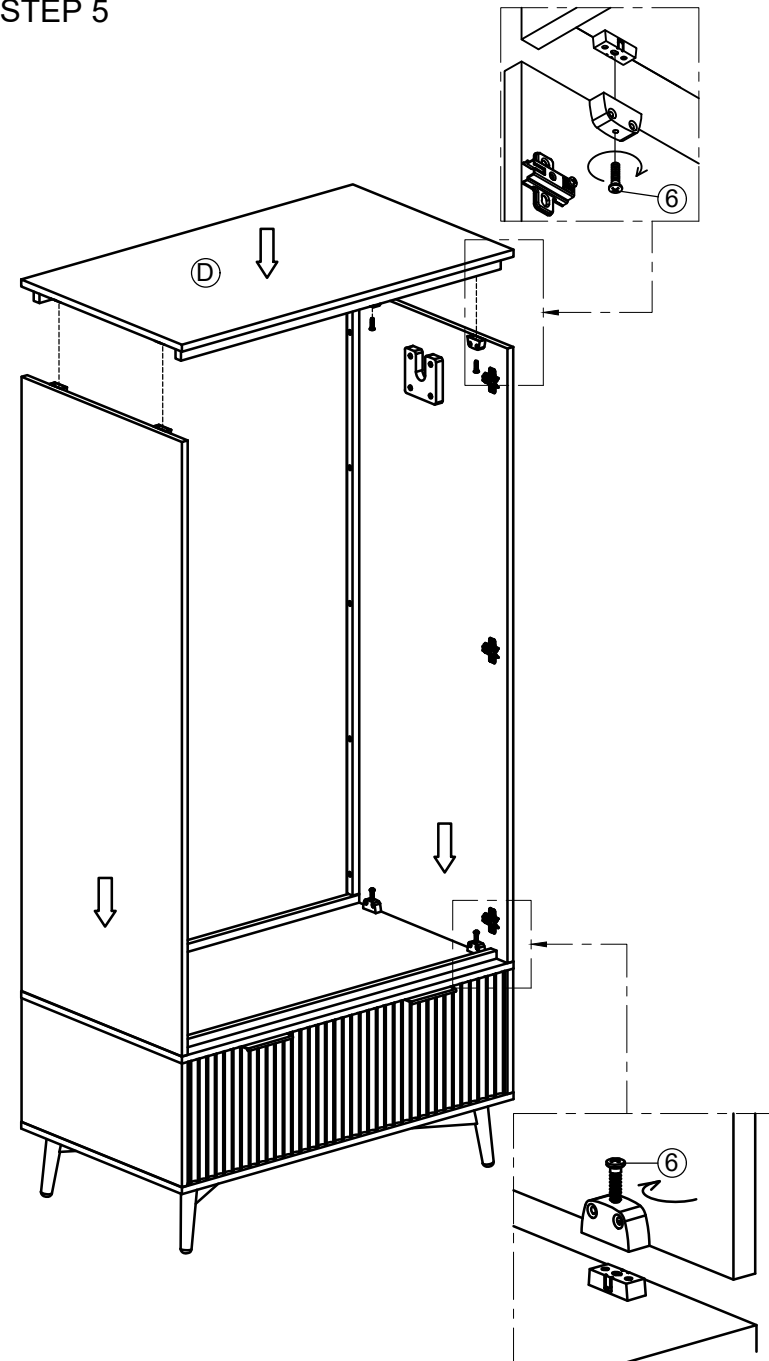


# ASSEMBLY INSTRUCTION GENTS WARDROBE

Page : 4 of 6

## STEP 6

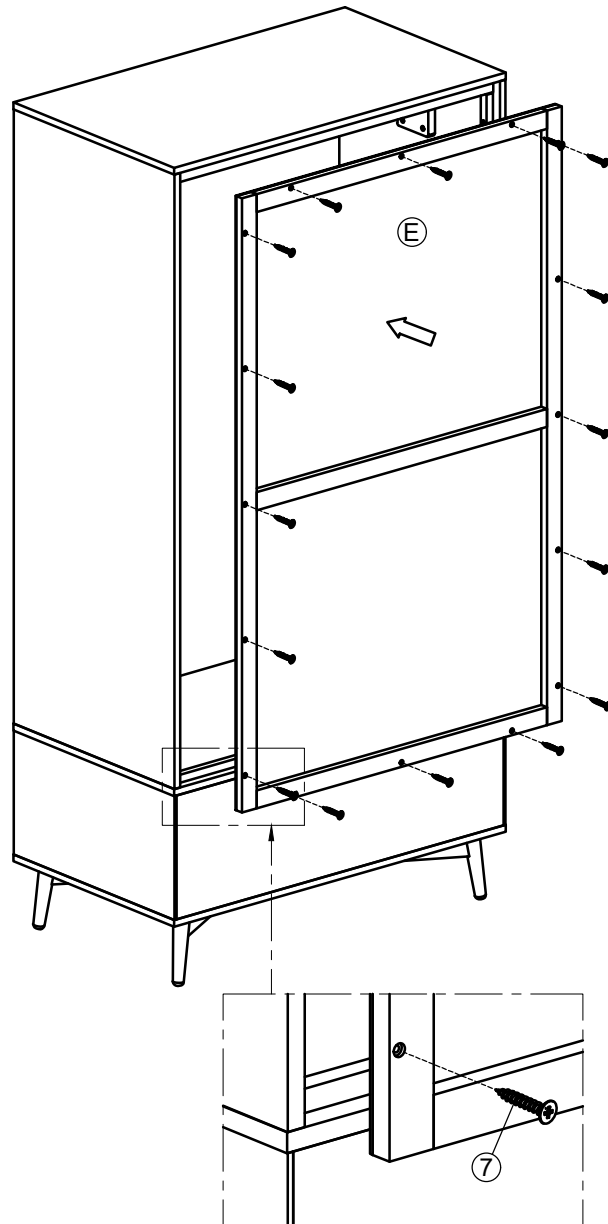


## STEP 7

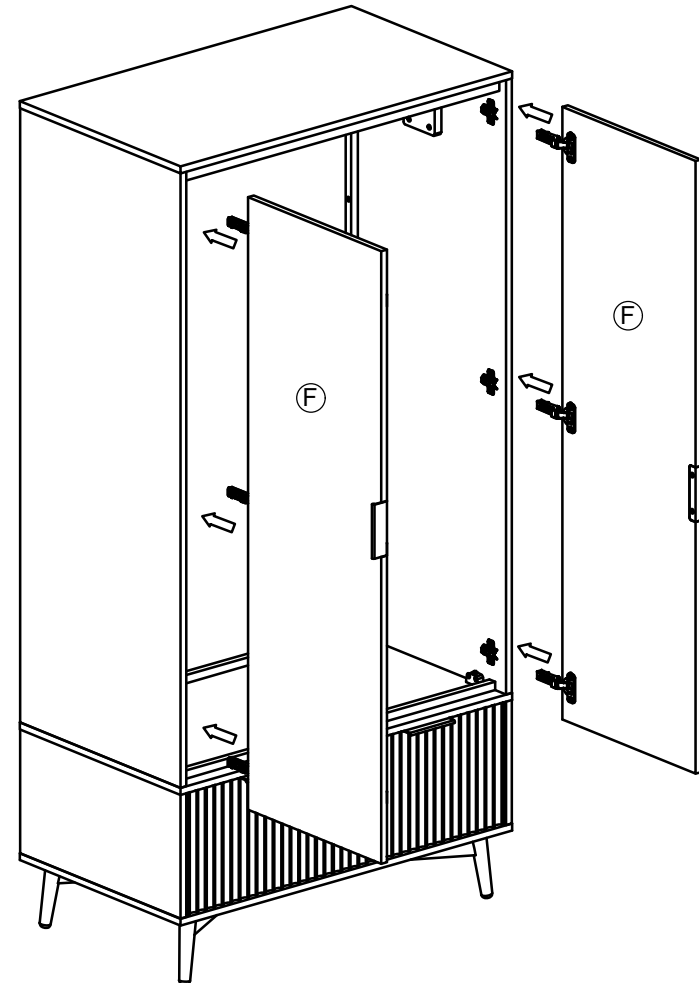


# ASSEMBLY INSTRUCTION GENTS WARDROBE

Page : 5 of 6

## STEP 8

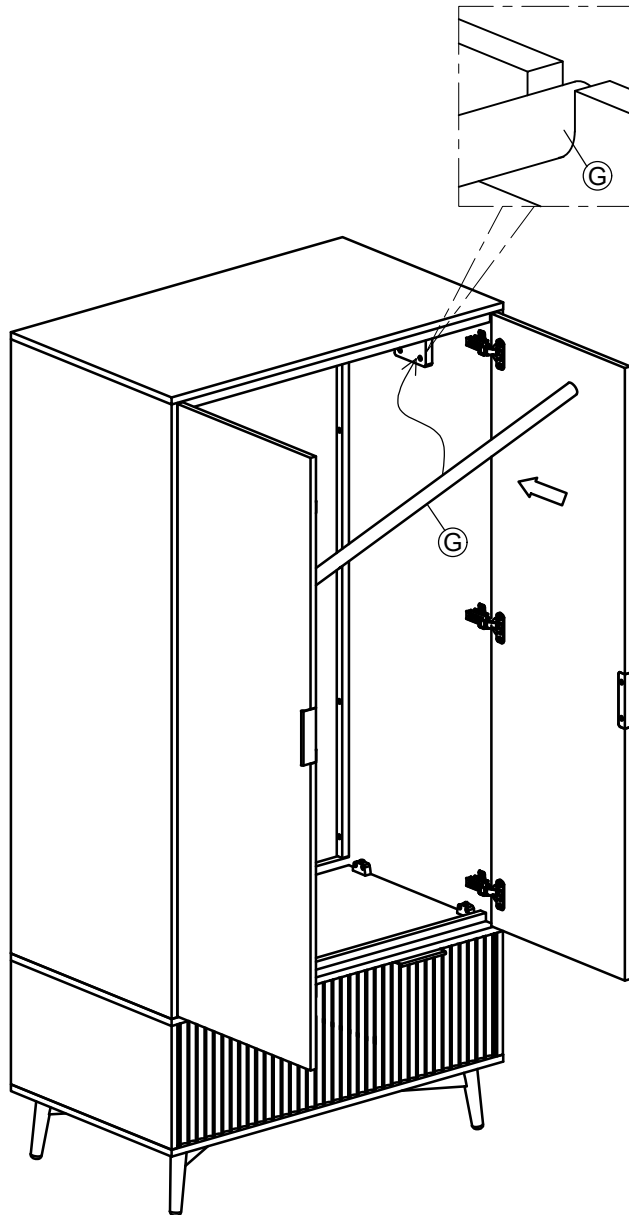


## STEP 9

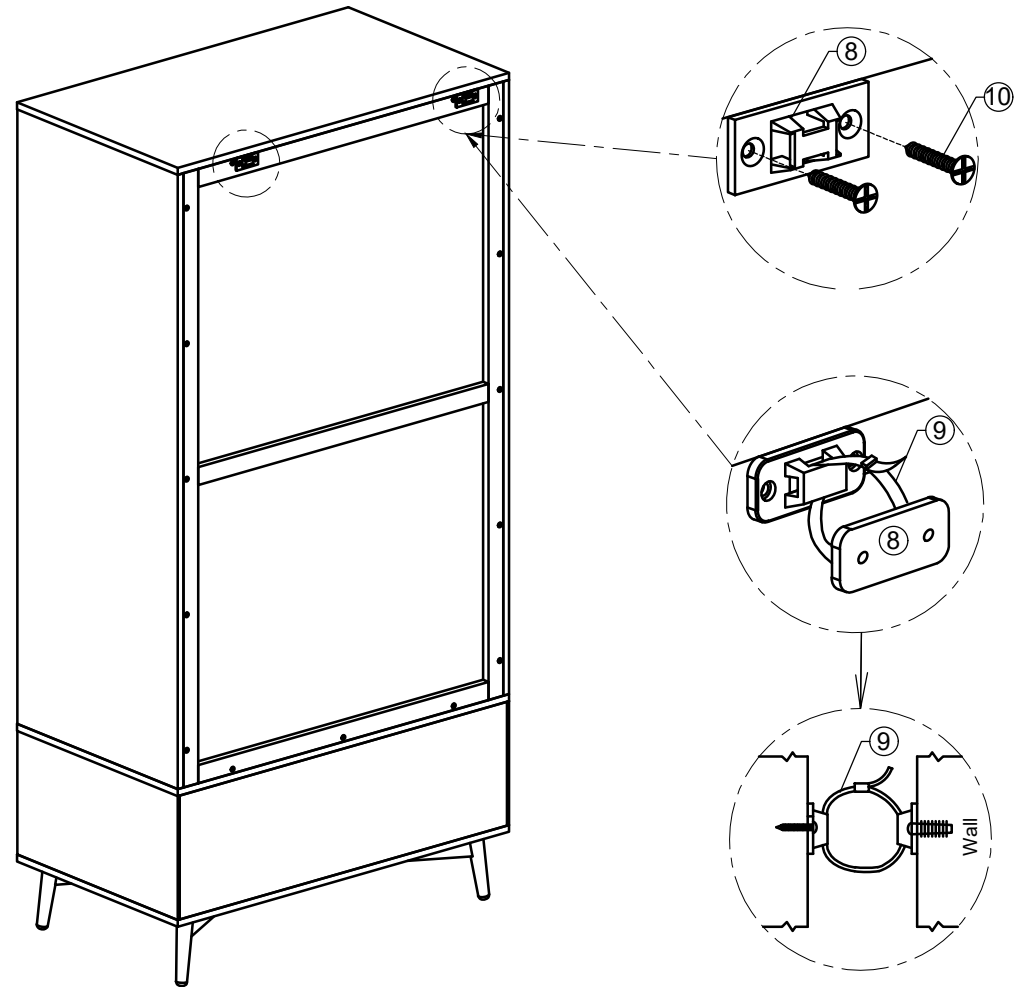

# HINGE ADJUSTMENT INSTRUCTIONS


## LATERAL ADJUSTMENT

by screw adjustment.

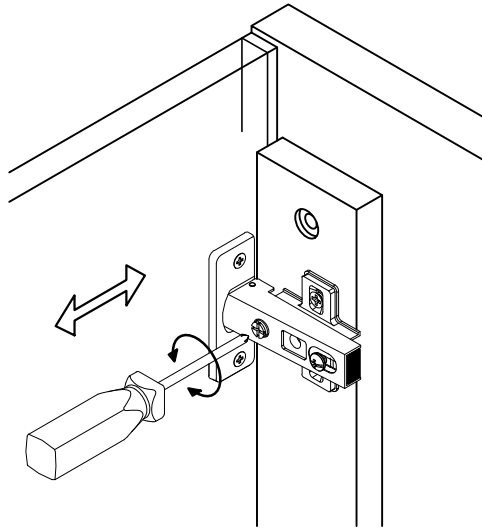


## FRONT-TO-BACK

by slackening and retightening the hinge-arm mounting screw.

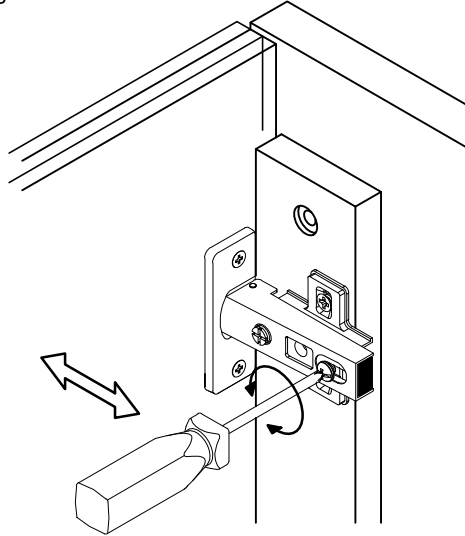


## VERTICAL ADJUSTMENT

via slots on mounting plate by slackening and retightening the screws on mounting plate

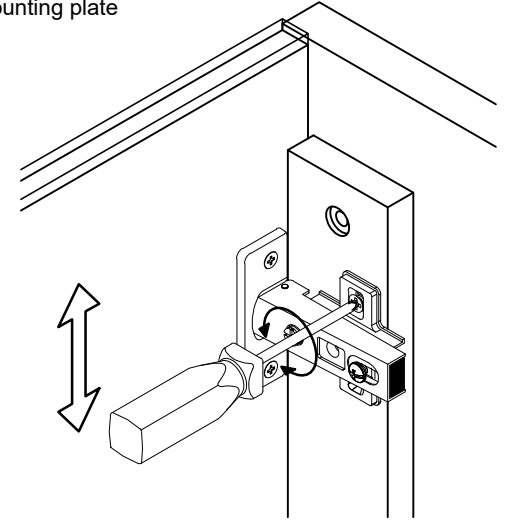

## ASSEMBLY

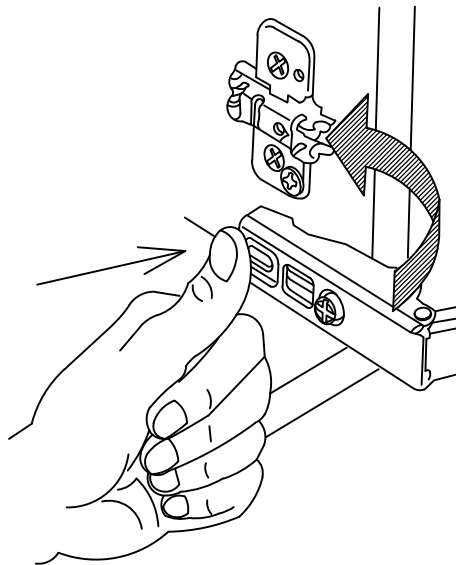

## DISASSEMBLY

